

## **COMMERCIAL DOCUMENTATION**



# 2D - LIFTING SYSTEMS | TF2 LIFTING CLUTCHES





#### **2D LIFTING CLUTCHES**

Load group [kN]	Lifting system	Anchor group [kN]	Load range anchor [kN]
<b>15</b> (12.5 kN – 15 kN)	TF1 - 012	12.5 – 15	12.5 15
<b>25</b> (7 kN – 25 kN)	TF1 - 025 TF2 - 025	14 – 25	7 14 20 25
<b>50</b> (30 kN – 50 kN)	TF1 - 050 TF2 - 050	30 – 50	30 40 50
<b>100</b> (53 kN – 100 kN)	TF1 - 100 TF2 - 100	53 – 100	53 75 100
<b>260</b> (125 kN – 260 kN)	TF1 - 260 TF2 - 260	125 – 260	125 140 220 260

Only components in the same load group can be combined.



TF2 - 25 kN TF2 - 50 kN TF2 - 100 kN TF2 - 260 kN

The lifting systems TF1 are made of high-grade steel wire rope according EN 12385-4, swaged in a ferrule made of AlMg1.8, and a shackle produced from high-strength steel. TF2 are made of high-quality steel and are designed with a safety factor c= 5. When TF1 and TF2 systems are assembled with the corresponding anchor, together they have the anchor minimum safety factor of c= 3.

Before delivery, the working load of each system is tested three times, and individual testing certificates are attached.


TF2s are different from TF1s due to the connection element (bracket) to the crane hook: the TF1 system's connection element is made with heavy-duty wire cable according EN12385-4.

The clutch head (shackle) in each load group matches the shape of the recess former RBF and incorporates a locker, which is inserted in the appropriate head anchor hole.



#### 2D LIFTING CLUTCHES - DIMENSIONS AND COMPONENTS



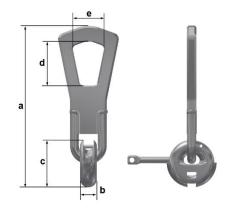

**Note:** Each lifting clutch TF2 is marked with the anchor load group, the CE marking, the manufacturer and identification numbers.

TF2 (Zinc plated)		Load aloas Load		Dimensions				
		Load class Range	а	b	С	d	е	
(=	[kN]		[kN]	[mm]	[mm]	[mm]	[mm]	[mm]
TF2 -025	44843	25	7– 25	259	27	78,5	70	50
TF2 -050	44844	50	30 – 50	325	36	105	86	58
TF2 -100	44845	100	53 – 100	431	50	146,7	107	75
TF2 -260	44846	260	125 – 260	620	72	216	154	110



#### **CHECKING THE LIFTING SYSTEM**


Just as with all lifting devices, trained personnel must inspect the TF1, TF2 lifting system at least twice a year. Any deformation of a locker indicates that the permitted load has been exceeded at least three times. A damaged locker can be replaced. No other repairs are permitted.

- Any deformation to the wire rope (see the type of damages mentioned on page 50), shackle, or metal structural elements weakens the lifting device with the risk of the precast element falling. Do not perform any repair work. The lifting device must be discarded. Lifting loops with broken strands or other signs of damage, kinking, bird caging, corrosion that require discarding according EN 13414-1 must not be used for further lifting.
- Damage, distortions, cracks and extensive corrosion can reduce the load-carrying capacity and lead to failure.
  This causes a hazard to life and limb. If necessary, any affected parts must be taken out of service immediately.

Cables must not come into contact with acids, caustic solutions or other aggressive substances. **Combining products from different companies is not recommended.** 

#### • The locker

A lifting system with a a worn or bent locker must be taken out of use. The wear on the locker must be less than the limits shown in the following table.

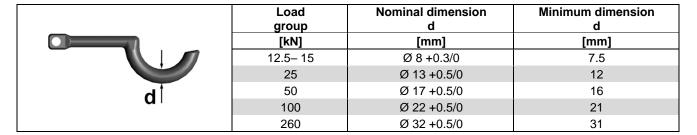

#### The shackle

If the shackle is deformed or the opening "e" is enlarged, the lifting system must be taken out of use and cannot be repaired. The wear on the locker must be less than the limits shown in the following table.

	Load	Nominal dimension	Maximum dimension
	group	е	е
	[kN]	[mm]	[mm]
	12.5– 15	7 +0.5/0	8
	25	13 +0.5/0	14
	50	20 +0.5/0	21
e	100	22 +0.5/0	23
<u>→</u>	260	33 +1.0/0	35

#### • The connection element

Connection elements (bracket) to the crane hook which have visible signs of damage or excessive wear must be immediately taken out of use. The wear on the bracket must be less than the limits shown in the following tables.

	Load group	Nominal dimension d	Minimum dimension d	
d	[kN]	[mm]	[mm]	
	25	14	13	
	50	20	19	
	100	26	25	
	260	40	38,5	


d	Cable type	Number of visible broken wires over a length of			
		3d	6d	30d	
	Stranded rope	4	6	16	

d = cable diameter



Wire cables should be inspected and discarded according EN 13414-1 when the following flaws occur:

- Kinking
- One strand is broken
- Separation of the outer layer of braids
- Crushed strands
- Crushing at the shackle contact point with more than 4 ruptured wires on braided cables or more than 10 ruptured wires on cable-laid rope
  - Signs of corrosion
  - Damage to or severe wear of the closing bush.
  - Signs of slipping between the cable and the closing bush
  - A cable with several broken wires mentioned in the table above must be taken out of use

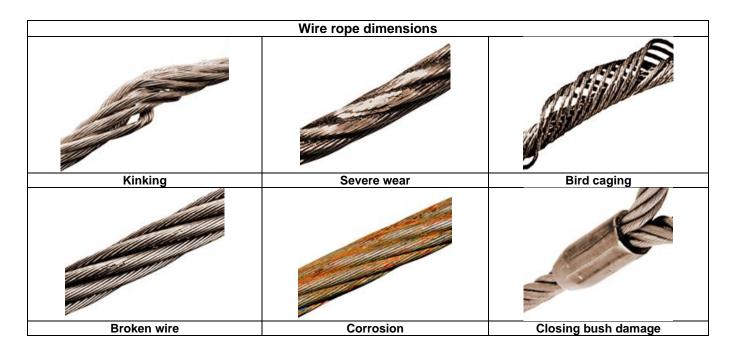



#### CONTACT



TERWA is the global supplier for precast and construction solutions with multiple offices around the world. With all our staff, partners and agents, we are happy to provide all construction and precast companies who work in the building industry with full service and 100% support.

#### **TERWA CONSTRUCTION GROUP**

### Terwa Construction Netherlands (HQ)

Global Sales & Distribution Kamerlingh Onneslaan 1-3 3401 MZ IJsselstein The Netherlands

T+31-(0)30 699 13 29

F +31-(0)30 220 10 77

E info@terwa.com

## Terwa Construction Poland Sales & Distribution

Ul. Cicha 5 lok. 4

00-353 Warszawa Poland

E info@terwa.com

### **Terwa Construction Central East Europe**

Sales & Distribution Strada Sânzienei 507075 Ghimbay

Romania T +40 372 611 576

E info@terwa.com

### Terwa Construction India & Middle East Sales & Distribution

India

T+91 89 687 000 41

E info@terwa.com

# Terwa Construction China Sales & distribution

5F 504, No. 101 Chuanchang road PRC, 200032, Shanghai China

E info@terwa.com

#### ALL SPECIFICATIONS CAN BE CHANGED WITHOUT PREVIOUS NOTICE.

#### **DISCLAIMER**

Terwa B.V. is not liable for deviations due to wear of the products it has delivered. Neither is Terwa B.V. liable for damage due to inaccurate and/or improper handling and use of the products it has delivered and/or use of same for purposes other than those intended.

Terwa B.V.'s responsibility is furthermore limited in accordance with article 13 of the "Metaalunie" conditions, which are applicable for all Terwa B.V. deliveries. The user is responsible for ensuring compliance with all applicable copyright laws. Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), or for any purpose, without the express written permission of Terwa B.V.